

◆ Thermal protection

When the inner temperature of video light becomes too high,the video light will automatically decrease the brightness of the light.

◆ Battery level indicator

There are three colors to indicate the remaining battery power:
Green: fully charged.
Red: low battery.
Flashing Red: battery is empty, light will turn of.

◆ Battery stretch

When the battery level is low the video light will automatically adjust (decrease) the brightness of the light to conserve power. When the battery is empty then light will power-off.

◆ General maintenance

There are two O-rings in the tail cap. Use silicone to keep the O-rings well lubricated. It is important to lubricate the O-rings if the video light has not been used in a long time or if the O-ring is hard. If the O-ring is damaged, broken or deformed it should be

NOTE: Do not use a sharp tool to rem

◆ Warnings

- 1.Only use 21700 Lithium batteries provided by the manufacturer.
 - 2.Do not open the tail cap when the video light is in the water.
 - 3.If the video light will not be used for a long period of time the battery should be removed.
- Failure to comply with these warnings may result in damage to the video light and will nullify the warranty.

◆ Warranty

Kraken provides a warranty against manufacturer defects for 1 year starting from the date of purchase.
Manufacturer defects occurring within 15 days of the date of purchase will result in an exchange of product at the vendor. All other manufacturer defects occurring within 1 year of the date of purchase will be repaired at no cost.
Proof of purchase is required for warranty support. The warranty does not cover failures or defects resulting from misuse (e. g., modification, damage) natural disasters or battery


◆ Trouble Shooting

Before returning the video light to the vendor, please try the following to improve function.

Symptom	Solution
The video light does not work	* Check the battery to make sure that it is inserted in the correct direction * Check the battery is charged * Check the tail cap is tight
Internal Leakage Wate	Check the O-rings in the tail cap to make sure that they are not broken and that there is no debris which might prevent a proper seal



 Hydra 1500
VSD
Diving Video Light

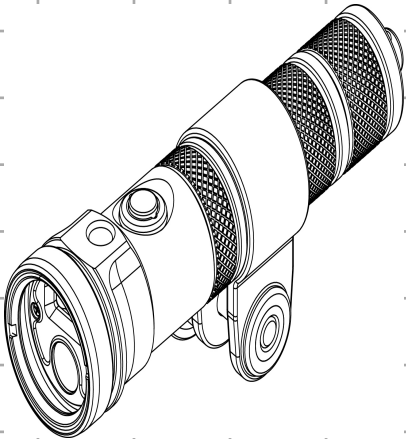


Read the manually carefully before using the vi

◆ Overview

The Hydra 1500 WSR+ is a metal bodied diving video light with LED (1500 lumens)

 ◆ Components

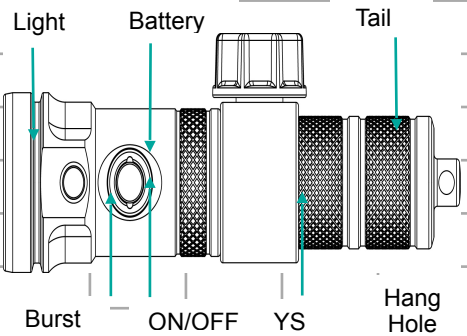

The light can function as a flashlight or a video light.
The light is very bright for its small size.
The light is easy to turn on / off. It is operated with a single push button located in the middle of the lead.
Low risk of the light over heating

Battery level indicator: Green light (Battery level is high), Red light (Battery level is low), Flashing red light (Battery level is very low) .

Battery stretch: When the battery is low, the video light will automatically adjust the brightness to 10% in order to conserve the remaining power.

◆ Accessories included

- 21700 battery with type-C USB charging port
- USB cable
- YS mount
- Spare O-ring x2
- Black hand rope lanyard
- Light - guide stick(Put into Burst port for increasing light intake)

◆ Specifications

Type of Battery	21700 Li-ion battery (5000mAh) Lithium Battery with Type-C USB Charging
Brightness	Wide Light:1500 lumens / Spot Light: 1000 lumens
Function Modes	Wide / Spot / Red /Burst Mode/ SOS / Strobe
Wide / Spot / Red Light Power Level	100% / 50% / 25%/0% (Only in Burst Mode)
Beam Angle	Wide Light 110 degrees / Spot Light 20 degrees
Burn time	90 minutes at full power
LED Life	Over 50,000 hours
Depth Rating	Depth Rating 100m / 330ft
Size	38 mm (D) * 146 mm (L)
Weight	205g on land & 105g under water

◆ To turn to video light ON/

 
Turn ON: Turn the tail clockwise so that it is tight to the head , Press and hold the ON/OFF button for one second. The default will be 100% brightness.

Turn OFF: Press the ON/OFF button and hold it down for two seconds.

To switch modes (Wide / Spot / Red)


When the light is on:
Press and hold the ON / OFF button for or

Repeat until you reach your desired

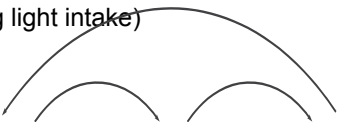

Adjusting the brightness in Wide / Spot / Red light mode

 When the light is on: Press and immediately release the ON/OFF button.

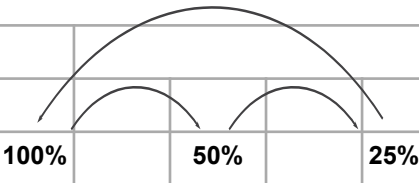

Turn on SOS: When the light is off: Press and hold the ON / OFF button for two seconds.

Switching Modes (SOS / Strobe):

When the light is SOS mode: Press and immediately release the ON / OFF button.

Turn off SOS: When the light is in SOS mode: Press and immediately release the ON/OFF button.

Burst Mode (Wide / Spot / Red)

When the light is on, press and immediately release ON / OFF button twice to enter burst mode at the same colour. Press and immediately release ON / OFF button to exit burst mode and return to continuous lighting. **Note: When adjusting the brightness to 0% in Burst Mode, The video light will work as Focus Mode**

(Light will automatically turn off when brightness reaches 0%)

◆ To install the battery

1. Turn the tail cap counter -clockwise to open the tail cap.
2. Put the 21700 Lithium battery in the tail cap.

Note: Look at the label located on the inside of the tail cap,make sure to align the positive and negative ends of the battery with the positive and negative

3. Turn the tail cap clock wise to reattach the tail to the head of the video light.

◆ To charger the battery

1. To charge the battery with the USB cable.
2. The power can be able supplied by USB (5V Maximum 2A).
3. When the battery begins to charge the indicator light on the battery will be **RED**.
4. When the battery is fully charged the indicator light will be **GREEN**.

