				1							
To charge the battery			◆ Warnings								
 To charge the battery, use the USB-C PD charger included with your light. Use the ports labelled USB-C1 or USB-C2 to charge the battery. Two batteries can be charged simultaneously. Note: Use of port USB-A while charging two batteries may cause charging to slow or stop. When the battery begins to charge the indicator light on the battery will be RED. When the battery is fully charged the indicator light on the battery will change to BLUE. 			 1.Only use Li-ion battery pack provided by the manufacturer. 2.Do not open the tail cap when the video light is in the water. 3.If the video light will not be used for a long period of time, the battery should be removed. Failure to comply with these warnings may result in damage to the video light and nullify the warranty. 					KRAKEN [±] sports ±			
Battery level indicator			♦ Warranty								
There are four colors to indicate the amount of power remaining in the battery and the function modes.			Kraken provides a warranty against manufacturer defects for 1 year starting from the date of purchase. Manufacturer defects occurring within 15 days of the date of purchase will result in an exchange of product at the vendor. All other manufacturer defects occurring within 1 year of the date of					Hydra 4000 WRGBU			
Blue approx. 100%~80%			purchase w	vill be repaire	ed at no cost.	Proof of purch					
Green	approx. 80%~30%		required for warranty support. The warranty does not cover failures or defects resulting from misuse (e.g., modification,								
Red	approx. 30%~10%		damage) natural disasters, or battery issues, including								
Single Blinking Red approx. 10%~0%			incorrect battery installation.								
Dual Blinking The current mode is Burst Mode											
Low battery warning			-				-				
When the battery level is low (approximately 10 minutes remaining) the video light will automatically decrease the brightness of the light to conserve power. When the battery is empty, the light will power off.			Troubleshooting light issues Before returning the light to the vendor, please troubleshoot by doing the following:				noot by				
Thermal protection			Problem Possible Solution			sible Solut	ion				
If the internal temperature of video light becomes too high the video light will automatically decrease the brightness of the light.				deo light ot turn on	* Ensure the battery is charged * Ensure the tail cap is tightly screwed to the light head						
♦ General main	tenance										
There are two O-rings in the tail cap. Use silicone to keep the O- rings well lubricated. It is important to lubricate the O-rings if the video light has not been used for a period of time, or if the O-ring is hard. Only use enough lubrication to make the O-ring shine, too much can attract dirt. If the O-ring is damaged, broken, or deformed it should be replaced with the spare included with your video light.			Moisture or water inside video light		Check the O-rings in the tail cap to ensure there is no debris or damage that could prevent a proper seal			Image: selection of the			
NOTE: Do not use a	a sharp tool to remove the	e O-ring.						Disease read the menually corefully before using the video light			
								Please read the manually carefully before using the video ligh			
Overview			Specifications					Burst modes (White / Red / Green / Blue / UV)			
The Hydra 4000 WRGBU is a metal bodied diving video light with COB LED (4000 lumens constant / 6000 lumens burst) .			Battery		3 x 21700 Li-ion battery pack (5000mAh) with Type-C USB Charging Port			When the light is on, press and hold the left button for ONE second to enter burst mode at the same colour. Press and hold the left button once again to exit burst mode and return to continuous lighting.			
Left Button Left Button Light Head			Brightness		White Light: 4000 lumens@CRI 90 constant / 6000 lumens burst			Adjusting the brightness in White / Red / Green / Blue / UV mode (Continuous and Burst Mode)			
			Function Modes		White / Red / Green / Blue / UV / Preset color / Automatic RGB / Burst / SOS			When the white light is on: Press and immediately release the left or right button to reduce or increase the brightness(100%-80%-60%-40%-20%).			
			Blue / UV Light Power Level		5 levels (20%,40%,60%,80%,100%)			Flashing signal mode (White):			
			Beam Angle		White light: 120 degrees on land / 100 degrees underwater			When the light is on, press and hold the right mode for ONE second to enter flashing signal mode . Press and immediately release the right button to exit flashing signal mode.			

YS Adapter		Burn time	75 minutes	(at 100% brightness)				
		LED Life	Over 50,00	0 hours	To turn on SOS/Strobe:			
	Hang Hole lanyard	Depth Rating	100m / 330)ft	When the light is OFF : Press the right and left buttons at the same time and hold down for TWO seconds to enter SOS mode.			
	attachment eye	Size	62 mm (D)	* 147 mm (L)	time and hold down for TWO seconds to enter SOS mode.			
			690g on la	nd including battery	To turn off SOS/Strobe:			
	O Burst Port	Weight	290g unde	rwater including battery	Press the right and left buttons at the same time and hold down for TWO seconds to turn off SOS mode.			
		To oper	ate the light		Sleep mode:			
		ONE second to release the mic	and left buttons at the s unlock the light, then ir Idle button to turn the lig	ame time and hold down for nmediately press and ght on. When the light is ide at 100% brightness.	We have also introduced sleep mode, which will let you temporarily and quickly turn the light off and back on to previous power level. To access sleep mode, when the light is on, press and hold the middle button for TWO seconds, the light will turn off. Press and hold the middle button again for TWO seconds to stop sleep mode and turn the light back on to the same power level as before.			
					To install the	battery		
		Turning the	light OFF: Press the	e right and left buttons at the	1. Twist the tail cap counter-clockwise to open.			
		same time and	hold down for TWO see	conds.	2. Put the battery pack in the tail cap.			
Accessories in			nodes (White / Red r/Automatic RGB)	/ Green / Blue / UV /	Note: When inserting battery, contact rings on battery must be facing light head.			
Li-ion battery pack with p					3. Twist the tail cap clockwise to reattach the tail to the head of the			
Charger/AC adapter		While the light	s on, press and immed	ately release the ON/OFF M white light \rightarrow Red \rightarrow		ckwise to reattach the tail to	the head of the	
•••		(middle) button	s on, press and immedi . The light will switch fro \rightarrow UV \rightarrow Preset color –	om White light \rightarrow Red \rightarrow	3.Twist the tail cap cloo video light.	ckwise to reattach the tail to	the head of the	
Charger/AC adapter		(middle) button Green → Blue	. The İight will switch from \rightarrow UV \rightarrow Preset color –	om White light → Red→ → White		ckwise to reattach the tail to	the head of the	
Charger/AC adapter USB type C cable		(middle) button Green → Blue When the light	. The light will switch from \rightarrow UV \rightarrow Preset color – is on, press and immed	om White light → Red→ → White iately release the middle		ckwise to reattach the tail to	the head of the	
Charger/AC adapter USB type C cable YS mount		(middle) buitton Green → Blue When the light button three tin	. The light will switch from \rightarrow UV \rightarrow Preset color – is on, press and immediates to enter Automatic F	om White light → Red→ → White iately release the middle		ckwise to reattach the tail to	the head of the	